


Starting up with self-priming stage

Before initial commissioning, fill the pump until water escapes from the outlet pipe of the three-way valve (set to "Vent"). Close the shut-off armature in the pressure pipe and activate the pump. The air conveyed by the vent stage escapes through the outlet pipe. After a while, an air/water mixture will escape followed by a strong water jet. Set the three-way valve to "Operation". Open the shut-off armature in the pressure line and adjust the flow data.

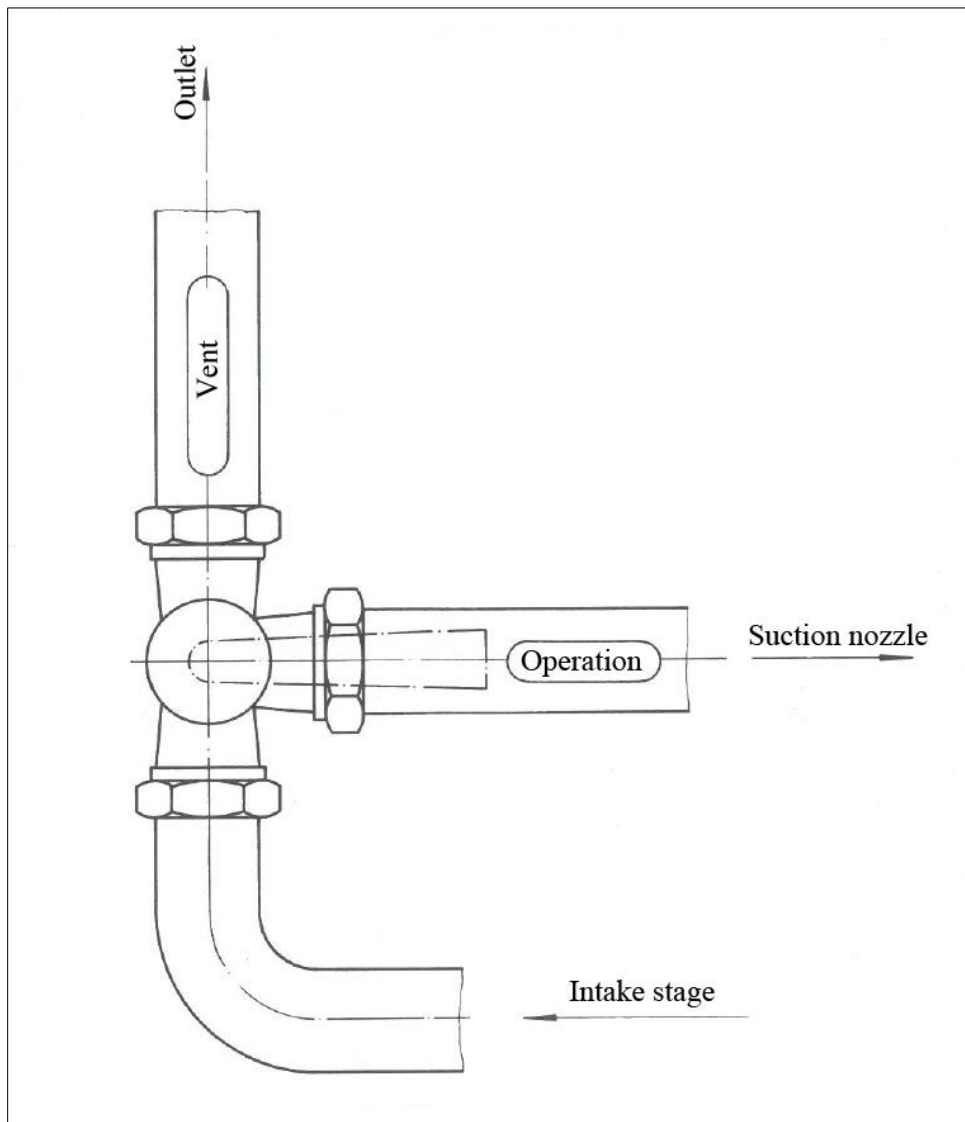

Please note:

Avoid extended operation against a closed shut-off armature in the pressure line. This can destroy the rotating parts of the pump. Ensure that the three-way valve is always in the "Operation" position during operation. All other positions are incorrect and risk damaging the self-priming stage.